PRACTITIONER'S MANUAL

DAW Industries

4P-Compact[™]

The Tiny K3 5-Bar for the Petite Adult

Stock #: TKC-4P0

IMPORTANT:

Adjusting alignment beyond recommended limits described within will adversely affect patient's gait, and could cause premature wear.

HEADQUARTERS:

6610 Nancy Ridge Road San Diego, CA 92121-2252 Orders: (800) 252-2828 • (858) 622-4962 Fax: (800) 856-8563

Fax: (800) 856-8563 www.daw-usa.com

Technical Support (800) 242-8669

CENTRAL/EASTERN DISTRIBUTION CENTER:

5579-B Chamblee Dunwoody Road

Suite 227

Atlanta, GA 30338-4154 Orders: (800) 824-7192 Fax: (800) 865-8563









4P-Compact[™]

The Tiny K3 5-Bar for the Petite Adult

Stock #: TKC-4P0

Benefits:

- ✓ Fully adjustable miniature DAW Pneumatics™ provide higher dampening control with zero maintenance needed.
- ✓ High strength Aerospace Construction delivers a higher weight limit relative to its tiny size.
- ✓ Its 4-Bar function provides high stability in stance and reduces the chance of tripping in swing phase.
- ✓ The exceptionally compact design was engineered to be both light-weight & easily covered by even the smallest foam covers, if required.





Sitting position

IMPORTANT:

Read technical information thoroughly before using knee.



Popular Proximal Options



Pediatric Male Pyramid for Knee-Top, Stainless Steel (#: GUPAC-MP1) Provides Angular & Rotational Adjustment



Pediatric 3-Prong KD Adapter, Stainless Steel (#: GUPAC-F4HLAM) Provides Rotational Adjustment

Browse our complete selection of Unique Components at daw-usa.com/all-connectors

Recommended K3 Foot



K3 Pro-Action[™] Foot Engineered for the low to moderately active K3 Individual

Provides 3 Dynamic Energy Returning Carbon Keel Options & Multi-Axial Ankle Motion with Rotation.

Suggested L-Codes*: L5981 L5986

*Please refer to the complete reimbursement disclaimer at www.daw-usa.com





Patient Notes Contents

Page :	ŀ
--------	---

	Recommended Order of Adjustments
	Adapter & Proximal Connection Procedure2-3
	Build Height
	Torque Settings
	Alignment
CNOI O	Swing Phase Adjustments (Flexion & Extension Dampening)
ABLE FUN	Extension Assist Adjustment 7
ADJUST	Replacing or Trimming the Extension Assist Spring
	DAW Prosthetic Knee Limited Warranty
	Specifications
	Patient Notes

Recommended Order of Adjustments

- 1. Swing Phase Dampening
- 2. Extension Assist





Pyramid (GUPAC-MP1) Connection Procedure:


Patient Notes

Adult weight limit: 165lbs 756kg)

- A. Using the included <u>3/8 Bolt</u>, remove the black <u>Spacer</u> from the center of the top of the knee.
- B. Flex the knee approximately 90°.
- C. Select your desired degree of external knee rotation. Each groove is an adjustment of 6.7° (360°/54 notches).
- D. Attach the Pyramid (GUPAC-MP1) using the included 3/8 Bolt (8mm hex). Apply blue Loctite 242 to the bolt and torque to 9ft-lb (12.2Nm).



Spacer 3/8 Bolt (8mm hex)

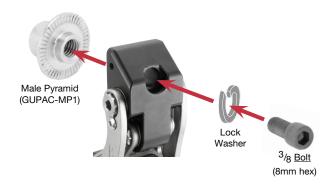


KD Adapter (TSC-KDC-L) Connection Procedure:

Adult weight limit: 165lbs 756kg)

After completing the KD Adapter (TSC-KDC-L) lamination, Complete steps A. through D. from the section above "Pyramid (GUPAC-MP1) Connection Procedure".

D. Attach the KD Adapter (TSC-KDC-L) using the included 3/8 Bolt (8mm hex). Apply blue Loctite 242 to the bolt and torque to 9ft-lb (12.2Nm).

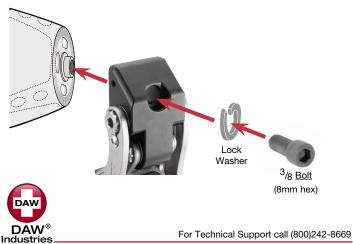



Specifications

Patient profile:

Body weight	Under 165lb (75kg)
Functional level	K3
Amputation level	Transfemoral, Bi-lateral TF and Knee Disaticulation

Knee Specifications:

Stock number	TKC-4P0
Max weight limit	165lb (75kg) PETITE ADULT ONLY
Knee weight	1.15lb (515g)
Swing controls	Separate Pneumatic Extension / Flexion Dampening, Extension Assist Adjustment & Swing Phase Adjustment
Stability controls	Polycentric Geometric Lock
Proximal connection	Unthreaded single hole for ³ / ₈ Bolt
Distal connection	22mm tube clamp
Warranty	2 years, upgrade for additional 3 years

Wire Basket (TSC-WB) Connection Procedure:

Adult weight limit: 165lbs (75kg)

NOTE: Do not remove the <u>Spacer</u> in the top of the knee

After completing the Wire Basket Adapter (TSC-WB) lamination,

- A. Flex the knee approximately 90°.
- B. Select your desired degree of external knee rotation. Each groove is an adjustment of 6.7° (360°/54 grooves).
- C. Attach the knee to the Wire Basket Adapter using the included <u>3/8 Bolt</u> (8mm hex).

Apply blue Loctite 242 to the bolt and torque to 9ft-lb (12.2Nm)



Wire Basket (TSC-WB) with Angular Adjustment Wedges (TWP-C2) Connection Procedure:

Adult weight limit: 165lbs 756kg)

 
NOTE: Do not remove the Spacer in the top of the knee.

After completing the Wire Basket Adapter (TSC-WB) lamination,

- A. Flex the knee approximately 90°.
- B. Select your desired degree of external knee rotation. Each groove is an adjustment of 6.7° (360°/54 grooves).
- C. Secure the knee and the wedges to the Wire Basket Adapter using the included 3/8 Bolt (8mm hex). Verify the ridges and grooves have seated properly. Apply blue Loctite 242 to the bolt and torque to 9ft-lb (12.2Nm) before walking your Patient.

Adjusting the Wedge Angle:

- A. Loosen the Bolt (8mm hex) approx. 1 turn counterclockwise.
- B. Insert 3mm or 2.5mm hex keys into the 3mm wide hole of each wedge.
- C. Rotate 1 wedge at-a-time to adjust your angle. Apply blue Loctite 242 to the bolt and torque to 9ft-lb (12.2Nm) before walking your Patient.





BUILD HEIGHT


TORQUE SETTINGS

Important:

Use blue Loctite™ 242 on all screws referenced here.

It is not recommended to use Ottobock Titanium Pylon. Do not use a spacer for height adjustment. Ensure pylon is cut straight.

It is recommended these torques be checked within 30 days and then 6 months after your delivery of this prothesis.

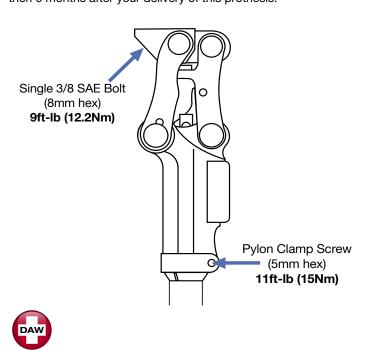

DAW Prosthetic Knee Limited Warranty

The knee comes with a Limited Warranty for 2-years. It covers manufacturer defects (excluding wear & tear). An additional 3 years of warranty coverage can be purchased for +15% of the original cost of the knee. See full warranty statement at: www.daw-usa.com/practitioner-resources/

Weight limit of this knee is 165lb (75kg) Petite Adults Only.

Bumpers are not under warranty.

Tight screws and a straight cut of the tubing are a must. Not following recommended use of components, including weight limit and alignment, will void the warranty. Make sure to read all instructions enclosed with the knee unit.

All repairs on the knee module must be done by a factory-trained DAW technician. Any disassembly done on the knee during the warranty period(s) will void the warranty (excluding disassembly of the extension spring housing).

Service Under Warranty

For all component repairs call DAW Industries right away. We will ship a replacement knee the same day, which will become your patient's new knee. The replacement component is under warranty for the time remaining on the original component.

The overnight shipping charge will be credited upon receipt of the failed knee component.

Service Outside of Warranty

Knees not under warranty may be repaired by DAW. While any unwarranted knee is being serviced, DAW will provide a rental knee subject to availability. The DAW rental fee is listed in the price list under each knee. The rental fee covers the period DAW takes to complete the repair with ten (10) days allowed for shipping in both directions. The same rental fee will be charged every 30 days passed the initial rental fee period.

For any repair you must first contact our Technical Services at 1(800)242-8669. This will allow DAW to best understand the issue. Our Technical Support will immediately asses if the repair qualifies as a "minor" or "substantial" repair. A "minor" repair will be completed, as a courtesy, free of charge (you will just pay for return shipping). A "substantial" repair will be billed at a flat rate according to knee model. Upon return of your repaired knee, you will be invoiced for the repair charge, if any. When DAW receives the rental knee, your account will be credited for the value of the returned knee (Gold Preferred+ = FREE rental; Preferred = 33% off).

In the event your knee is unrepairable, you will be notified immediately. The rental must then be returned to DAW, 2nd day, within five (5) working days. The rental fee may

be applied toward the purchase of a new DAW knee.



For Technical Support call (800)242-8669

For Technical Support call (800)242-8669

Replacing or Trimming the Extension Assist Spring

To replace the Extension Assist Spring:

- A. Completely remove the Pylon Clamp Screw (5mm hex).
- B. Remove the pylon.
- C. Flex the knee to full flexion.
- D. Using a 8mm wrench, or crescent wrench, twist the Lock Nut (1) clockwise, the Spring Housing (2) will extend out of the knee as you twist the Lock Nut.
- E. You can now pull the Spring (3) out of the Housing (2).
- F. Insert your new Spring 3 into the Housing 2.
- G. Unflex the knee to full extension and return the housing to the knee making sure the groove for the Pylon Clamp Screw lines up properly.

 
After returning the Pylon. Retighten Pylon Clamp Screw (5mm hex) to 11ft-lb (15Nm)


To trim the Extension Assist spring:

Complete steps A. through E. above

Using a grinding wheel, trim one or two coils (maximum) off one end of the Spring. Smooth the trimmed end. Return the Spring to the housing, trimmed end down. Continue with step G. above.






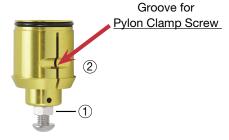



Standard alignment procedure must be observed to obtain the maximum benefits offered by this knee. All alignment references should be taken from the center of the anterior superior knee axis (commonly referred to as the Knee Center).

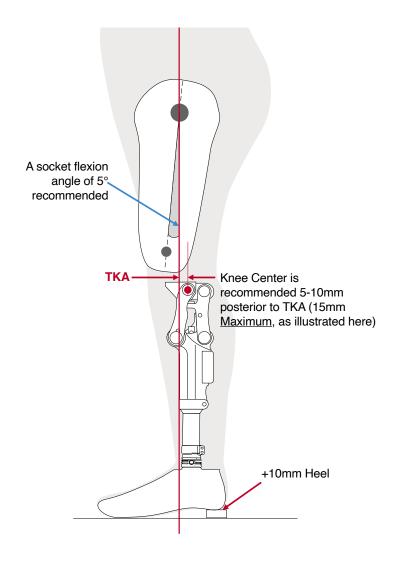





For Technical Support call (800)242-8669

 δ

Adjusting Swing Phase Controls

(Flexion & Extension Dampening)

Flexion Dampening Adjustment

Resistance to heel rise is accomplished by turning the <u>Flexion</u> <u>Adjustment Screw</u> (3mm hex) located at the posterior surface of the knee. Turn the <u>Flexion Adjustment Screw</u>:

Clockwise to increase resistance.

Counter-Clockwise to decrease resistance.

Extension Dampening Adjustment

Resistance to extension and terminal impact is accomplished by turning the Extension Adjustment Screw (3mm hex).

Turn the Extension Adjustment Screw:

Clockwise to increase resistance.

Counter-Clockwise to decrease resistance.

Do all flexion and extension adjustments in 1/4 turn increments

WARNING: Excessive clockwise adjustment of the Flexion or Extension Screws can jam and damage the needle pin, thus eliminating full range-of-motion resistance control.

Extension
Adjustment Screw
(3mm hex)

Flexion Adjustment Screw (3mm hex)



Adjusting Extension Assist

To Adjust Extension Assist:

- A. Loosen the <u>Pylon Clamp Screw</u> (5mm hex) and remove the Pylon
- B. Loosen the Lock Nut (8mm wrench)
- C. Turn the <u>Extension Assist Control Screw</u> (3mm hex): *Clockwise* to increase extension assist *Counter-clockwise* to decrease extension assist
- D. Re-tighten the <u>Lock Nut</u>, **Hand Tighten** (8mm wrench). After returning the pylon, re-tighten <u>Pylon Clamp Screw</u> to 11ft-lb (15Nm).

